

HDC# 13142 MFG# TW-19075WO PARISIAN END TABLE 25"Hx24"Wx24"D WASHED OAK

## **ASSEMBLY INSTRUCTIONS**

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China




## BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF PART NEEDED.

## HARDWARE LIST

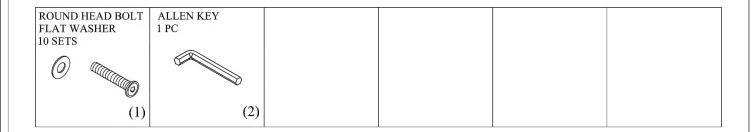

## PARTS LIST

BOTTOM FRAME 1 PC	PILLAR 1 PC	CONNECTION PANEL 1 PC
A	В	C
TOP PANEL 1 PC		
I PC		
D		


NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.


STEP 1: ASSEMBLE PILLAR (B) AND CONNECTION PANEL (C) STEP 2: ASSEMBLE TOP PANEL (D)

CONNECTION PANEL (C) AND PILLAR (B) TOGETHER BY ALLEN KEY (2) AS SHOWN.



• USE ROUND HEAD BOLT AND FLAT WASHER (1) TO ASSEMBLE • USE ROUND HEAD BOLT AND FLAT WASHER (1) TO ASSEMBLE CONNECTION PANEL (C) AND TOP PANEL (D) TOGETHER AS SHOWN.

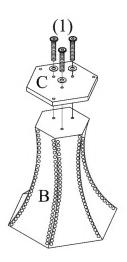

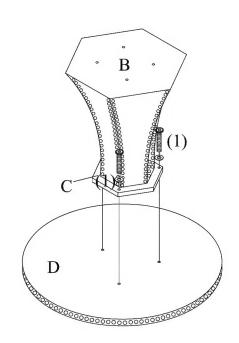

STEP 3: ASSEMBLE BOTTOM FRAME (A)

• USE ROUND HEAD BOLT AND FLAT WASHER (1) TO ASSEMBLE ASSEMBLY COMPLETED AS SHOWN. BOTTOM FRAME (A) AND PILLAR (B) TOGETHER AS SHOWN.

STEP 4:

